

FREE TO CHOOSE INNOVATIONS

XORO®

KHß 300

X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X



Benutzerhandbuch (Deutsch)
User Guide (English)

Sicherheitshinweise



Das Blitzsymbol im Dreieck weist den Benutzer auf gefährliche Spannungen an einigen freiliegenden Bauteilen im Inneren des Gerätes hin.

Das Ausrufezeichen im Dreieck weist den Benutzer auf wichtige Bedienungs- und Wartungsanweisungen (Service) in diesem Handbuch hin, die unbedingt befolgt werden sollten.



Das Gerät wurde getestet und entspricht lt. FCC Norm den Standards eines Klasse B Gerätes. Diese Standards wurden entwickelt um Interferenzen mit anderen heimischen Elektrogeräten zu vermeiden bzw. zu reduzieren. Dieses Gerät kann Radiowellen verursachen und ist es nicht wie in der Anleitung vorgeschrieben installiert, kann es zu Störungen des Radios oder Fernsehers, zum Beispiel beim Ein- oder Ausschalten des Gerätes kommen.

Bedienungsanleitung

1. Folgen Sie den Sicherheitshinweisen und Instruktionen dieses Handbuches.
2. Dieses Handbuch sollte für späteres Nachschlagen aufbewahrt werden.

Bluetooth

- Die Funksignale von Bluetooth-Geräten können andere elektronische oder medizinische Geräte stören. Halten Sie den KHB 300 von medizinischen Geräten fern. Halten Sie einen Sicherheitsabstand von min. 40cm zu Herzschrittmachern ein. Schalten Sie das Gerät in Bereichen ab, in denen die Verwendung verboten ist. Beispiele: Tankstellen, Flugzeuge, Krankenhäuser und andere medizinische Einrichtungen, Bereiche mit automatisch gesteuerten Anlagen und Maschinen.
- Die Leistung von drahtlosen Verbindungen kann abhängig von den verwendeten Geräten und Umgebungsbedingungen variieren. Die MAS Elektronik AG übernimmt keine Haftung, falls es durch die Verwendung des KHB 300 zu Datenverlust oder nicht autorisierten Zugriff auf Daten kommt.

Sicherheitshinweise

- Fassen Sie das Gerät niemals mit feuchten oder nassen Händen an.
- Das Gerät kann nur mit der auf der Rückseite beschriebenen Spannung betrieben werden. Sollten Sie die Netzspannung nicht kennen, fragen Sie bitte einen Elektriker.
- Dieses Gerät darf nicht in der Nähe von Feuchtigkeit und Wasser positioniert werden.
- Ziehen Sie für die Reinigung den Netzstecker aus der Steckdose.
- Benutzen Sie keine Flüssigreiniger oder Reinigungssprays. Das Gerät darf nur mit einem feuchten Tuch gereinigt werden.
- Das Kabel ist ummantelt und isoliert den Strom. Stellen Sie bitte keine Gegenstände auf das Kabel, da dadurch die Schutzfunktion verloren gehen könnte. Vermeiden Sie große Belastungen des Kabels, insbesondere an Buchsen und Steckern.
- Wenn Sie den Stecker aus der Steckdose herausziehen wollen, ziehen Sie immer am Stecker und nicht am Kabel. Das Kabel könnte ansonsten reißen.
- Überlasten Sie keine Steckdosen, Verlängerungskabel oder sonstige Leitungen, da dies zu Bränden oder elektrischen Schocks führen kann.
- In die Öffnungen des Gerätes dürfen keine Gegenstände eingeführt werden, da an einigen Stellen Strom fließt und der Kontakt Feuer oder einen Stromschlag hervorrufen kann.
- Erhöhen Sie nicht die Lautstärke, wenn gerade eine leise Passage abgespielt wird. Dies könnte zu Schäden an den Lautsprechern führen, wenn eine laute Passage kommt.
- Das Gerät darf nicht in der Nähe von Hitzequellen, wie z.B. Öfen, Heizungen positioniert werden.
- Schützen Sie das Gerät vor Feuchtigkeit und Witterungseinflüssen.



Wiederaufladbare Batterie

Das Gerät wird mit einem eingebauten Lithium-Akku mit Strom versorgt. Wenn das Gerät nicht über einen längeren Zeitraum verwendet wird, kann der Akku leer sein. Laden Sie den Akku vor der Verwendung.

- Wiederaufladbare Batterien dürfen nur unter Aufsicht eines Erwachsenen aufgeladen werden. .
- Verwenden Sie nur das mitgelieferte Kabel, um den Akku aufzuladen. Unsachgemäßes Aufladen kann die Batterie und das Gerät beschädigen.
- Versuchen Sie nicht, den Akku oder Akkupack zu öffnen. Es gibt keine zu wartenden Teile.
- Bitte entsorgen Sie den Akku gemäß den örtlichen Regulierung, und nicht über den Hausmüll.
- Lassen Sie das Gerät nicht an kalten oder warmen Orten, wie zB in einem geschlossenen Auto bei sommerlichen oder winterlichen Bedingungen, es wird die Kapazität und Lebensdauer des eingebauten Akkus zu reduzieren. Versuchen Sie immer, den Akku bei Temperaturen zwischen 15 ° C und 25 ° C (59 ° F und 77 ° F) zu halten. Ein Gerät mit einem kalten oder warmen Akku funktioniert unter Umständen vorübergehend nicht, selbst wenn der Akku vollständig geladen ist.

Technische Daten

Lastimpedanz	32Ω
S/N:	≥75dB
Frequenzbereich :	20Hz-20KHz
Audioquelle:	iPhone, iPad, Smartphone, PC, Laptop,MP3,MP4 etc.
Function spec	2.1+EDR (2,4GHz), Mikrofon
Profile	A2DP, AVRCP, HFP, HSP
Reichweite	ca. 10m
Akku	3.7V, 300mA/h (Li-Ion)
Energieversorgung	Lithium Batterie oder USB Kabel
Größe	150x69.3x186.8mm
Gewicht	ca. 169g

Lieferumfang

- XORO KHB 300
- Anleitung
- USB & Audiokabel

Hinweise:

- Das Gerät darf nur mit dem original Zubehör verwendet werden.
- Überprüfen Sie direkt nach dem Kauf die Vollständigkeit des Zubehörs. Sollte Zubehör fehlen, wenden Sie sich bitte direkt an den Händler, beim dem Sie das Gerät erworben haben.



Servicefall

- Führen Sie Reparaturen niemals selbst durch, bitte überlassen Sie dies immer qualifiziertem Personal.
- Kontaktieren Sie den Reparaturdienst bei folgenden Fehlern:
 - a. Wenn das Netzteil oder Netzkabel defekt ist.
 - b. Wenn Gegenstände in das Gerät gefallen sind.
 - c. Wenn das Gerät mit Wasser in Berührung gekommen ist.
 - d. Wenn das Gerät trotz richtiger Anwendung nicht funktioniert.
 - e. Wenn das Gerät fallen gelassen wurde und wenn das Produkt Leistungsschwankungen aufweist.
- Verwenden Sie originale Ersatzteile. Falsche Ersatzteile können zu Kurzschlüssen oder Feuer und anderen Pannen führen.
- Starker Zigarettenrauchen beschädigt die Elektronik des Gerätes. Schäden durch Zigarettenrauch werden nicht im Rahmen der Gewährleistung behoben.

Kontakt mit dem Xoro-Kundendienst aufnehmen:

Per Telefon: 04161 800 24 24 (Mo-Fr, 11.00Uhr bis 17.00Uhr)

Per eMail: support@ersservice.de

ERS GmbH Elektronik Repair Service
Weidegrund 3
21614 Buxtehude
Deutschland

Wir helfen Ihnen gerne bei Fragen zur Bedienung oder falls Probleme mit Ihrem Gerät auftreten.

Wiederverwertung von Elektrogeräten

Das Produkt wurde aus hochwertigen Materialien und Komponenten hergestellt, diese sind recyclingfähig und können wiederverwendet werden können. Die durchkreuzte Mülltonne auf dem Produkt oder auf der Verpackung bedeutet, dass das Produkt der Europäischen Richtlinie 2002/96/EC entspricht.

Informieren Sie sich über die vor Ort geltenden Bestimmungen zur separaten Entsorgung elektronischer Geräte. Beachten Sie die örtlichen Bestimmungen und entsorgen Sie keine alten Produkte mit dem normalen Hausmüll. Durch eine richtige Entsorgung alter Produkte tragen Sie zum Umweltschutz und zur Gesundheit der Menschen bei.



Wiederverwertung von Papier und Pappe

Das Materialwiederverwertungssymbol auf dem Verpackungskarton und dem Benutzerhandbuch bedeutet, dass diese recyclingfähig sind. Entsorgen Sie die Verpackung nicht mit dem normalen Hausmüll.



Wiederverwertung von Kunststoffen

Das Materialwiederverwertungssymbol auf Kunststoffteilen bedeutet, dass diese recyclingfähig sind. Entsorgen Sie die Kunststoffe nicht mit dem normalen Hausmüll.



Der Grüne Punkt

Der Grüne Punkt auf Kartons bedeutet, dass die MAS Elektronik AG eine Abgabe an die Gesellschaft für Abfallvermeidung und Sekundärrohstoffgewinnung zahlt.




Batterien


Jeder Verbraucher ist gesetzlich verpflichtet, Batterien bei einer Sammelstelle seiner Gemeinde oder im Handel abzugeben, damit sie einer umweltschonenden Entsorgung zugeführt werden können.

Bitte entsorgen Sie Batterien nicht im Hausmüll.

Bluetooth & WLAN Richtlinie


Unsere Produkte entsprechen den jeweiligen Richtlinien der Europäischen Union im speziellen der Richtlinie 1999/5/EC (die R&TTE-Richtlinie). Die zugehörige Konformitätserklärung (DoC) ist im Downloadbereich des Produktes auf unserer Webseite abrufbar.

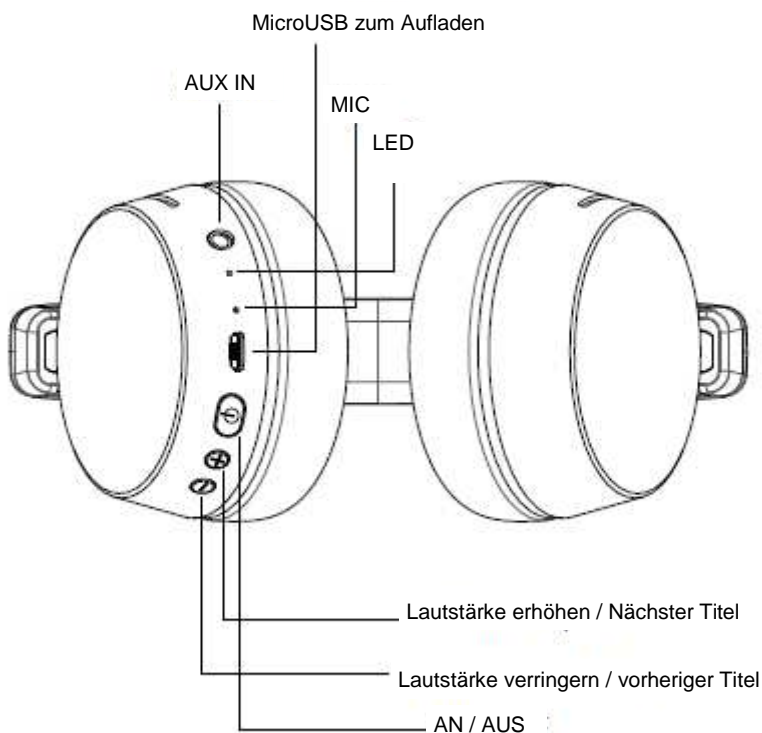



Installation / Verwendung

Step . 1

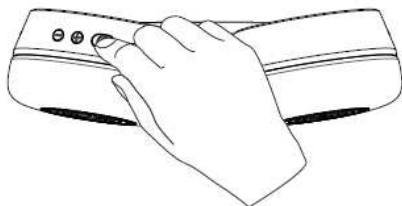


Einschalten

Step . 2



einstellbare Winkel / Längen

Kabelverbindung

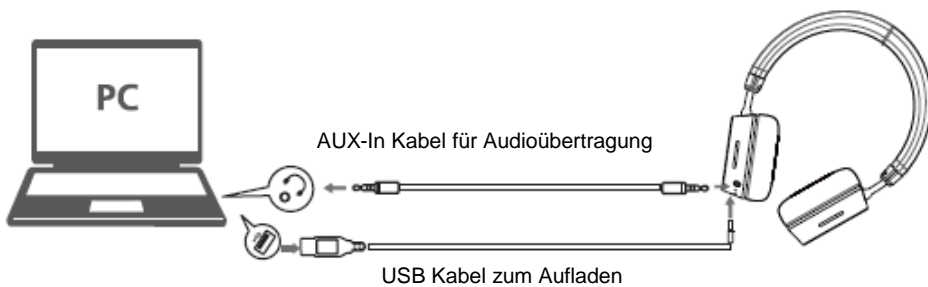



Bluetooth, NFC & Aufladen

Bluetooth Verbindung herstellen

So verbinden Sie den Xoro KHB 300 über Bluetooth mit Ihrem Smartphone. Dabei dürfen die Kopfhörer höchstens 10 Meter von dem zu verbindenden Gerät entfernt sein und sich dazwischen keine Hindernisse befinden.

1. Aktivieren Sie den Pairing-Modus am Kopfhörer durch Drücken des Schalters "BT". Dabei sollte die LED blau blinken.
2. Schalten Sie die Bluetooth-Funktion auf dem zu verbindenden Gerät an.
3. Wählen Sie "Suchen" oder "Discover" im Bluetooth-Menü des zu verbindenden Gerätes.
4. Wählen Sie "KHB300" aus und stellen Sie die Bluetooth Verbindung her.
6. Falls gefordert, geben Sie das Kennwort oder den PIN 0000 ein.
7. Drücken Sie die Eingabetaste.

Nach Abschluss der oben genannten Schritte, wird eine Meldung auf dem zu verbindenden Gerät angezeigt, die bestätigt, dass Ihr Gerät ist nun gekoppelt / verknüpft ist. Für den Fall, dass das Pairing fehlschlägt, wiederholen Sie die oben aufgeführten Schritte. Wenn Sie den Xoro KHB 300 ausschalten, aber das Bluetooth auf Ihrem externen Gerät an bleibt, werden sich die Geräte beim erneuten Starten des KHB 300 automatisch verbinden.

NFC Verbindung herstellen



NFC: Die Nahfeldkommunikation (Near Field Communication, Abkürzung NFC) ist ein internationaler Übertragungsstandard zum kontaktlosen Austausch von Daten per Funktechnik über kurze Strecken von wenigen Zentimetern und einer Datenübertragungsrate von maximal 424 kBit/s

Unterstützt Ihr Handy bzw. Smartphone "NFC", können Sie eine Verbindung zum KHB500 herstellen bzw. trennen, indem Sie Ihr Handy/Smartphone kurz auf den "NFC"-Schriftzug auf der Oberseite des Lautsprechers legen. Zur Aktivierung bzw. Verwendung der NFC-Funktion lesen Sie bitte im Handbuch Ihres Handy/Smartphones nach.

Internen Akku aufladen

Das Gerät verfügt über einen eingebauten Akku. Der Kopfhörer kann über ein USB-Kabel mit einem Computer oder einer anderen stromführenden USB 2.0 Schnittstelle aufgeladen werden. Wenn das Gerät geladen wird, leuchtet die Status LED rot.

Nach dem Aufladen kann der KHB 300 ohne einen Stromanschluss verwendet werden. Laden Sie das Gerät wieder auf, wenn Sie hören, dass die Kopfhörer mehrere Signaltöne nacheinander ausgibt. Dies bedeutet, dass der interne Akku die Leistung verloren hat.





Gewährleistungsbestimmungen



Sofern die Produkte im Zeitpunkt des Gefahrübergangs nicht die vereinbarte Beschaffenheit haben, ist die MAS Elektronik AG nach ihrer Wahl zur Mangelbeseitigung oder Ersatzlieferung berechtigt. Im Falle der Mangelbeseitigung/Ersatzlieferung erwirbt die MAS Elektronik AG mit dem Ausbau/Austausch Eigentum an den ausgebauten / ausgetauschten Komponenten / Geräten. Im Rahmen der Produktion sowie zur Mangelbeseitigung / Ersatzlieferung verwendet die MAS Elektronik AG Ersatzteile oder Komponenten, die neu oder neuwertig entsprechend dem jeweils üblichen Industriestandard sind.

Die Gewährleistung für Verschleißteile (z.B. Akkus und Batterien) beträgt 6 Monate. Sofern das Gerät einen eingebauten Datenspeicher hat (Festplatte, Flash-Speicher oder ähnliches), ist der Kunde für eine Datensicherung vor Rücksendung verantwortlich. Die MAS Elektronik AG haftet nicht für Datenverluste eingesandter Kundengeräte. Die MAS Elektronik AG behält sich das Recht vor, bei eingesandten Geräten die Werkseinstellungen wiederherzustellen. Bitte notieren Sie sich daher gegebenenfalls Ihre persönlichen Einstellungen. Die MAS Elektronik AG haftet nicht für vom Kunden mit dem Gerät eingesandtes produktfremdes Zubehör (z.B. DVDs, Festplatten, Flash-Speicher, Batterien).

Die Mangelanprüche werden entsprechend der aktuellen gesetzlichen Gewährleistung erfüllt. Die Gewährleistung gilt nur in dem Land, in dem das Produkt gekauft wurde.

Folgendes ist von der Gewährleistung ausgeschlossen: Schäden an der Politur, den Zubehörteilen, den Batterien, unfallbedingte Schäden, Schäden durch Missbrauch, Schmutz, Wasser, Batterieauslauf, Fälschung.

Außerdem ausgeschlossen sind Schäden durch Reparaturarbeiten unautorisierter Agenturen und Schäden die durch das Aufspielen eines Firmware Upgrades entstanden sind, es sei denn, es war erforderlich, das Upgrade zu installieren, um zugesicherte Eigenschaften überhaupt erst zu ermöglichen.

Die MAS Elektronik AG haftet nicht für Schäden durch Verlust, bei unsachgemäßem Gebrauch des Gerätes (getrennt oder mit anderen Geräten zusammen), für Verletzungen des Kunden aufgrund der Benutzung des Gerätes oder aufgrund von so genannter höherer Gewalt oder sonstigen Gründen.

Für eine ordnungsgemäße und reibungslose Abwicklung von Gewährleistungsfällen / Reparaturen benötigen Sie eine RMA-Nummer. Diese erhalten Sie im Internet unter <http://www.xoro.de/service/> oder telefonisch (s.u.)

Senden Sie bitte das Gerät originalverpackt einschließlich aller Zubehörteile mit einer Kopie der Kaufbelegs, einer Fehlerbeschreibung sowie der RMA-Nummer (bitte auf dem Paket gut sichtbar notieren!) an:

MAS Elektronik AG
Weidegrund 3
21614 Buxtehude

Kundendienst

E-Mail: support@ersservice.de
Kundendienst: 04161 800 24 24 (Mo-Fr, 11.00Uhr bis 17.00Uhr)

FREE TO CHOOSE INNOVATIONS

XORO®

KHß 300

X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X
X X X



User Guide (English)

Safety Information



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. This device complies with Part 15 of the FCC Rules. The FCC Rules are developed to avoid or reduce the interference of electrical devices at home. This device may cause radio wave. If it is not installed as instructed, it may cause interference to radio or TV, especially at the moment of switching on and off.

User's Manual

- All the safety precautions and the operating instructions should be followed.
- The safety and operating instructions should be retained for future reference.

Bluetooth

- The radio wave of this Bluetooth Headphone may impair the operation of other electric or medical devices. Keep this Bluetooth Headphone at least 40cm from pacemakers or other medical devices. Switch off the device in areas where the use is prohibited (For example: Aircraft, medical facilities, refuelling points or close to automatic controlled devices.)

General

- Never touch the device with wet hands.
- Keep the appliance away from rain and moisture.
- Make sure that the power cable is not bent, caught or run over and that it does not come into contact with heat sources.
- Make sure that the power cable is not wound around the device while in operation.
- Only use extension cables that are designed for the power consumption level of the machine.
- Only operate the machine if the electrical voltage stated on the type plate beneath the machine agrees with the voltage on your plug socket. The wrong voltage can destroy the machine.
- Do not open the appliance.
- Pull out the mains plug if the appliance is not to be used over a longer period of time.
- Do not connect accessories on the box which are not defined by the manufacturer.
- Do not increase the volume when the Headphone is just playing very quiet sections. This could damage the Headphone if very loud passages start all of a sudden after the quiet section.
- Switch the box off by the Off/On switch if it is not going to be used for a longer period of time. Please unplug the power cable from the wall outlet.
- Disconnect the main plug during thunderstorms.
- Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered.
- Protect the device against weather influences, moistures and high temperature.
- Never spill liquid of any kind on the product.
- Do not expose the device to direct sunlight



Rechargeable Battery

The device is powered by a built-in rechargeable lithium battery. If the device is not used for a long period, the battery may be out of power. Please charge the battery before using.

- If the device is not used for a long period of time, the battery may lose its charge. Please recharge the battery.
- Rechargeable batteries are only to be charged under adult supervision.
- Use only the supplied cable to charge the battery. Improper charging may damage the battery and the device.
- Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding touching your skin.
- Keep the battery out of reach from children. If swallowed, consult a physician immediately.
- Don't dispose battery in fire as it may explode. Battery may also explode if damaged. Please dispose it according to local regulation, don't dispose it as household waste.
- Leaving the Device in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the integrated battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Technical Data

Load impedance	32Ω
S/N:	≥75dB
Frequency range:	20Hz-20KHz
Audio source:	iPhone, iPad, Smartphone, PC, Laptop etc.
Bluetooth-Version	2.1+EDR (2,4GHz)
Profiles	A2DP, AVRCP, HFP, HSP
Operating Range	approx. 10m
Battery	3.7V, 300mA/h (Lilon)
Power supply	Lithium battery or USB cable
Dimensions	150x69.3x186.8mm
Weight	approx. 169g

Accessories

- KHB 300
- User Manual
- USB & Audio Cable

Notes:

- Please use the Headphone with original accessories only.
- Please contact your dealer immediately in case of missing accessories.



Defect

1. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer to qualified service personnel.
2. Refer to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way.
3. When the product exhibits a distinct change in performance this indicates a need for service.
4. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
5. Nicotine can damage the electronic components. In case of service regarding too much nicotine, than the warranty/guarantee expired.
6. Please read in the section Troubleshooting our service address and phone number.

Xoro Customer Care Service:

Phone: +49 4161 800 24 24 (Mo-Fr, 11.00 to 17.00)

eMail:support@ersservice.de

ERS GmbH Elektronik Repair Service

Weidegrund 3

21614 Buxtehude, Germany

Recycling of electronic devices

This product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please, dispose of this equipment at your local community waste collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic product. Please, help us to conserve the environment we live in!



Recycling of paper and carton

The material recycling symbol on the carton and user manual denotes that they are recyclable. Dispose them not with the normal household waste.



Recycling of plastic parts

The material recycling symbol on the plastic parts denotes that they are recyclable. Dispose them not with the normal household waste.



Green Dot

The "Grüne Punkt" denotes that the MAS Elektronik AG pays a duty to the "Society for Waste Prevention and Secondary Resource Generation".



Batteries

1. The batteries can be returned free of charge after use in the shop or in their immediate vicinity.
2. The consumer is legally obliged to return used batteries.
3. The icons on batteries are with one of the two following characters, consisting of a strikethrough trashcan and the chemical symbol of heavy metals decisive for classification as contaminant-laden.
4. Both symbols have the same meaning.
5. Batteries that contain pollutants are characterised by chemical symbols: Pb = battery contains lead, Cd = battery containing cadmium, Hg = battery contains mercury.


Every consumer is legally obliged to dispose these batteries at the collection point of his community or dealer for a environmental friendly disposal. We dispose used batteries for you free of charge and environmental friendly.





Getting Started


General controls

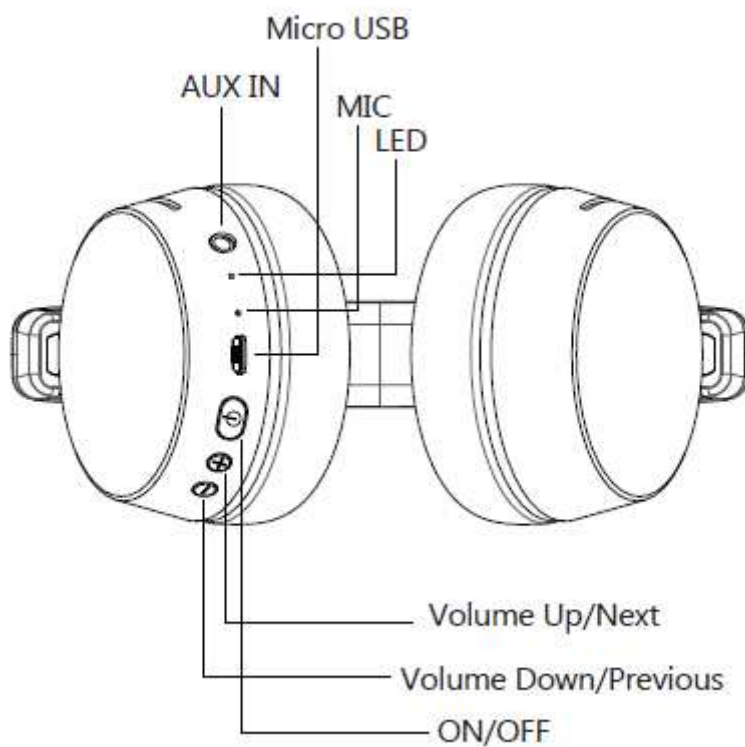




Installation Operation

Step . 1

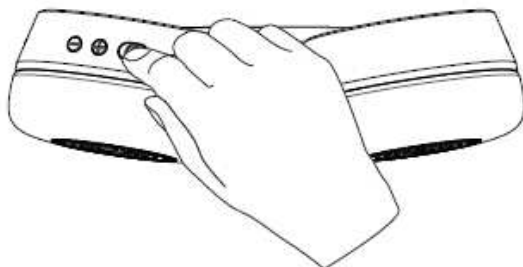

put on this headphone


Step . 2

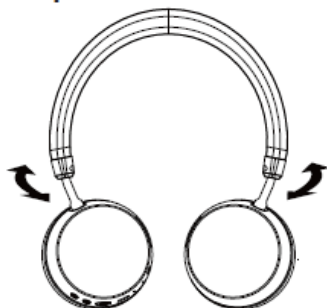

Adjustable angle

It can be adjusted To be fit by twsiting the left and right ear muffs

Cable Connection

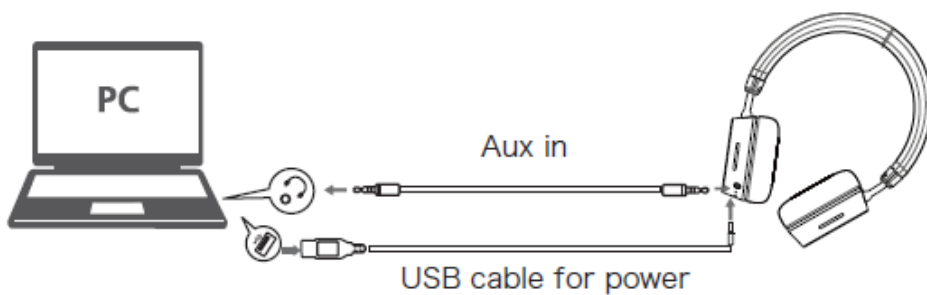



Bluetooth Connection



Bluetooth Connection

Pairing headphone to your Smart device (Smart device should be within 10 meters of your headphone).

1. Activate pairing mode on headphone by long pressing" ON/OFF" button.
The LED will flash in blue.
2. Turn on your device, navigate to the Bluetooth function (refer to the device owner's manual to locate Bluetooth function).
3. Select "Set Up" Bluetooth or turn "ON" Bluetooth.
4. Select "Search" or "Discover" devices.
5. Select "KHB300".
6. If requested, type the password or PIN 0000
7. Press the Enter key.

After completing the steps above, a message on your Smart device will appear confirming that your device is now paired/ connected.

In case of unsuccessful pairing, turn off it and restart it, then do as stepsabove. If you turn off the device, but the Bluetooth on your tablet remains open, when you restart the device, the Bluetooth will be connected automatically.

English

NFC Connection



NFC: Near Field Communication, is a set of standard for wireless devices to establish radio communication with each other by touching them together or bringing them into close proximity, usually within a few centimeters.

Please activate the NFC function of your smart device and put the device close to the Bluetooth headphone KHB 300. Your smart device will ask you if you want to pair with the headphone, choose Yes or OK to complete the pairing process







Battery Charging



The device has a built-in rechargeable battery. This can be charged by USB cable connected with your computer. When it's charging, the light will turn to red
After charging, the device can be used without the power connection. Charge the device again when you hear the headphone make successive beep sound.



Function Guidance

Play music from your smartphone

Button	Operation	Funktion
	Long Press	Volume up
	Short Press	Next song
	Long Press	Volume down
	Short Press	Previous song
	Short Press	Play/Pause, Answer/End a call
	Long Press	Ready for pairing

Answer/End a call: Press  to answer or end a call.
Short press  two times, you could make the last record call.

LED Display Status

	LED Display	Light indication
Red Light	Flash quickly	Low power
	Stay Solid	Charging in process
	OFF	Fully charged
Blue Light	Flash quickly	Power on
	Stay solid	Paired



Limited Warranty



In case the products delivered are not free from defects in material or workmanship, MAS Elektronik AG has the right to either repair or replace the defective product at its choice. MAS Elektronik AG manufactures and repairs goods using components which are new or equivalent to new in accordance with industry standards and practice. The warranty for wearing parts (e.g. rechargeable batteries) is limited to 6 months.

In case the device is equipped with internal data storage (e.g. hard disc drive, Flash drive), the customer is responsible to backup his data before sending the device. MAS Elektronik AG is not liable for any data loss on returned devices. MAS Elektronik AG reserves the right to reset returned devices to factory defaults. Please note your personal settings for this reason.

MAS Elektronik AG is not liable for any accessories not belonging to original package content such as DVDs, hard disc drives, Flash storage devices, batteries, etc.

This limited warranty covers the warranty requirements set by authorities in your country.

This limited warranty only is valid in the country the product was purchased. This limited warranty does not cover finishes, accessories or batteries, nor does it cover damage resulting from accident, misuse, abuse, dirt, water, battery leakage, tampering, servicing performed or attempted by unauthorized service agencies. This limited warranty does not cover damages resulting from firmware upgrades. Only in case of firmware upgrades needed to add functions promised at time of purchase, such damages are covered by this limited warranty. For a correct and frictionless completion of warranty or repairs you need a RMA No. You may obtain a RMA on the internet at www.mas.de/FAQ or by telephone.

Please send the device in its original packing material, all standard accessories and a copy of the invoice, a description of defect and the RMA No. to following address. Please note the RMA number clear and in large numbers on the outer package.

MAS Elektronik AG
Weidegrund 3
21614 Buxtehude
Germany

Support
e-mail: support@ersservice.de
Hotline: +49 (0) 4161 800 24 24

FREE TO CHOOSE INNOVATIONS



XORO by MAS Elektronik AG

Weidegrund 3
21614 Buxtehude
Deutschland

www.xoro.de
www.mas.de

DE: V1
ENG: V1

